



## **C3-RS-665-2W**

**PROFESSIONAL TWO WAY REMOTE CAR  
STARTER  
&  
3 CHANNEL SECURITY SYSTEM**

## **OPERATIONS MANUAL**



**Compatible**

Please register your product at:  
[www.autopageusa.com](http://www.autopageusa.com)






 






THIS PRODUCT IS DESIGNED FOR PROFESIONAL INSTALLATION ONLY

## SYSTEM OPERATIONS:

### WARNINGS:

As with any product that performs automatic functions, there are certain safety precautions that you must practice and be aware of.

1. Keep the transmitter out of children's reach.
2. Do not leave anyone in the vehicle while running on remote control.
3. Alert servicing personnel that the vehicle can be started automatically.
4. Do not start the vehicle by remote while it's in an enclosed area or garage.
5. Always apply the parking brake and lock the vehicle as you exit the vehicle.
6. The vehicle windows must be rolled up.
7. Should the unit malfunction, disconnect the fuse until the problem is corrected.
8. The use and operations of this system is the sole responsibility of the operator.
9. Some areas may have local ordinances that prohibit leaving a vehicle running on public streets.
10. It is not safe to remote start the vehicle if the vehicle is parked on a steep incline.

| Transmitter Button                                                                 | System Function                         | Remark                                                                                                                                    |
|------------------------------------------------------------------------------------|-----------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
|   | Lock Doors & Arm System                 |                                                                                                                                           |
|  | Panic function                          | Press and Hold for 3 seconds.<br>Press  to stop panic. |
|  | Car Locator                             | Under armed mode                                                                                                                          |
|  | Arm and Delete The 2 Stage Shock Sensor | Press twice within 3 seconds                                                                                                              |
|  | Silent Arming / Disarming               | Ignition in "off" position.                                                                                                               |
|  | Unlock Doors & Disarm System            |                                                                                                                                           |
|  | Two Steps Door Unlock & Disarm System   | Press twice within 3 seconds.                                                                                                             |
|  | Trunk Release (Channel 2)               | Press and Hold for 2 seconds                                                                                                              |
|  | Passive Arming By-pass                  | While the system Disarmed.                                                                                                                |
|  | Activate or Turn Off The Remote Start   | Safety start requires two pushes                                                                                                          |
|  | Channel # 3 Auxiliary Output            | Press both buttons together                                                                                                               |



times when the battery compartment is empty, and then insert the new battery.

## THE REMOTE LCD ICONS WITH FUNCTION:



### Door Lock

Your vehicle doors are locked.



Door Unlock Your vehicle doors are unlocked



### Start Mode

Your vehicle is running



### Valet Mode

All the function shall be temporarily on hold.



### Remote Transmission

You are transmitting the signal to control unit



### In – Range Indicator

You are within the remote control range.



Trunk Release Trunk open. Trunk symbol only.



### Low Battery

You have to replace the battery of remote control.



### Vibration Mode

Remote Control vibrates when the system is triggered



### Ignition On






## **SAVE Power Save Mode**

Save the battery power


## PROGRAM MODE FOR LCD REMOTE CONTROL TRANSCEIVER:



Press and hold all four remote control buttons simultaneously unit

**one long beep is heard. LCD Programming has now been entered.**


| Transceiver Button                                                                                                                                                       | System Function                            | Remark                 |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------|------------------------|
| <b>Program Mode - </b>                                                                  | Switching code for 2nd / 1st Car Operation | Press within 5 seconds |
| <b>Program Mode - </b>                                                                  | Melody / Vibration Mode                    | Press within 5 seconds |
| <b>Program Mode - *</b>                                                                                                                                                  | Power Save Mode                            | Press within 5 seconds |
|                                                                                          | LCD screen lamp turns on for 5 seconds.    |                        |
|  -  + * | Clear the Flash Icon and Melody Sound      | Press within 3 seconds |

#### **ACTIVE LOCK:**

1. Press  button on the transmitter.
2. The Siren will chirp once and parking lights will flash once indicating that the system is now active. The vehicle doors will lock upon activating only when interfaced with the keyless entry system.

**SILENT LOCKING / UNLOCKING:** Pressing the  +  buttons together on the transmitter will lock or unlock your system, No chirp sound will be heard. Lock / unlock confirmation will be seen through the vehicle's parking lights only.

 
#### **ACTIVE UNLOCK:**


1. Press  button on the transmitter.
2. The horn will chirp twice and parking light will flash twice to indicating that the keyless system is now unlocked. The vehicle doors will unlock and dome lights will turn on for 30 seconds.

#### **2-way LCD Remote Control Transceiver:**

2nd Car Operation: While the “II” icon display on the LCD screen, you can remote control and communicate with a second Autopage AM frequency security system. It has two short “beep” sounds while pressing any button of the LCD screen transceiver


1. Press and hold all four remote control buttons simultaneously unit one long beep is heard. LCD Programming has now been entered.



2. Within 5 seconds press and hold  button until **two** beeping sounds are heard and the “II” icon will display on the LCD screen to indicate the second transceiver pin code has been initiated.
3. To exit programming mode, take no action for five seconds. The remote control will generate two long beeps to indicate programming mode has been exited.

### Back to first Car Operation:



This will allow you to control and communicate with the first vehicles security system.

1. Press and hold all four remote control buttons simultaneously unit one long beep is heard. Programming has now been entered.
2. Within 5 seconds press and hold  button until **one** beep sound is heard.
3. To exit programming mode, take no action for five seconds. The remote control will generate two long beeps to indicate programming mode has been exited.



### Vibration / Melody Mode:

Vibration mode is useful when you are in a noisy place and it is difficult to hear the beep sound from the remote control. In this mode the unit will vibrate if your security system is triggered.

1. Press and hold all four remote control buttons simultaneously until one long beep is heard. Programming has now been entered.
2. Within 5 seconds, press the  button to select the mode of vibration or melody, the  icon will display on the LCD screen to show the LCD remote transceiver is in vibration mode.
3. To exit programming mode, take no action for five seconds. The remote control will generate two long beeps to indicate programming mode has been



exited.


### Power Save Mode:

While in the power save mode, the LCD remote transceiver will “sleep” until a button is pushed. This will extend the life of battery. When power save mode is “ON”, the remote control will wake up periodically to check for messages from the security module.


 
1. Press and hold all four remote control buttons simultaneously until one long beep is heard. Programming has now been entered.
2. Within 5 seconds, press the \* button to toggle “On” or “Off”. The remote will beep once for “On”, twice for “Off”. When power save mode is “On”, the **SAVE** icon on the LCD screens to indicate entry the “power save mode”
3. To exit programming mode, take no action for five seconds. The remote control will generate two long beeps to indicate programming mode has been exited.



### Screen Lamp ON:

Press the  button once and the LCD screen lamp will turn on for 5 seconds.

### Clear the Flash Icon and Melody Sound:





Cycle the ignition then press the  button first, within 3 seconds press  buttons at the same time. It will clear the flash icon and melody sound on the LCD screen transceiver.

### Stop The Trigger Melody Sound:


While triggering the alarm the LCD screen will alert the user through melody sound and flashing trigger icon. Press any button on the LCD remote transmitter to stop the melody sound.

### **PANIC FUNCTION: (IF SIREN or HORN IS INSTALLED)**


The transmitter can be used as a remote panic switch to manually trigger the vehicle's horn in case of emergency.

1. Press and hold the  button for 3 second. The siren will immediately sound.
2. During panic mode, the normal function of this transmitter button will be suspended. The  and  buttons can be used to lock and unlock the doors (if the option is installed),
3. To stop the panic, press the  button on the transmitter again.
4. If no buttons are pressed, the panic function will stop automatically in 30 seconds.

### **TRUNK RELEASE (Additional Installation Required)**


Press and hold the  button on transmitter for two seconds to remote control the trunk release or other electric devices.

### **CAR LOCATOR (ONLY IF SIREN or HORN IS INSTALLED)**

Press the  button once when the system is armed to active car locator function. The horn will chirp 6 times. The parking light will flash 12 times, for you to easily locate your car.

### **TO REMOTE START THE VEHICLE:**

When you want to start your vehicle,

1. Press  button once on the transmitter.
2. The parking lights will flash to indicate the remote start received the signal.
3. The engine will start in approximately 5 seconds.
4. A few seconds after the engine is running, the parking lights will turn on again and climate controls will activate and adjust the vehicles interior temperature to your preset setting.
5. The vehicle will run for a 5 to 30 minute cycle and automatically shut down.

### **TO OVERRIDE VEHICLE FROM REMOTE START CONTROL:**

To operate the vehicle while it is running from the remote start:

1. Insert the ignition key and turn it to "ON" (not the start) position.
2. Press the brake pedal.



**Note:** If the brake pedal is pressed before the key is in the ON position, the engine will shut down.


### TEMPORARY STOP FEATURE:

This feature allows the vehicle to remain running after the key has been removed from the ignition. This feature is useful for occasions when you wish to exit and lock the vehicle for short periods of time, but would like to leave the engine running and the climate control on.

1. Before turning off the engine, press the \* button once on the transmitter. The parking lights will come on and the LED will flash 3 times to confirm Temporary Stop feature 'ON'
2. Turn the ignition key to OFF position. (The engine will stay running.)
3. The engine will run until the pre-programmed time elapsed or shutdown input is received.



### CHANGING THE BATTERY IN YOUR XT-33 TRANSMITTERS

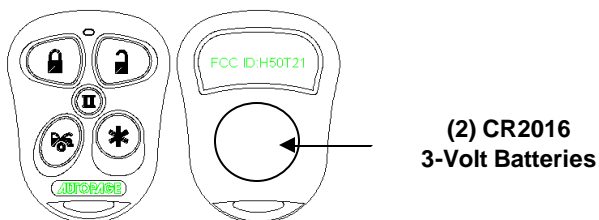**XT-33:** This transmitter uses two (2) 3-volt lithium ion batteries (#CR2016) that are sandwiched together with the (+) side facing upward. To replace the battery, you will need to use a small flat blade screwdriver. Locate the small notch on the lower right side of the transmitter case next to the key ring. Using the flat blade screwdriver, carefully pry the top case from the bottom case. It should snap apart after breaking the seal. Before removing the batteries note the direction of the positive (+) terminal. Place the new batteries in exactly the same manner, being careful not to bend or damage the contact terminal. Snap the cases back together and then test the transmitter to insure it arms and disarms the alarm.




### ACTIVE LOCK & ARM:


1. Press the button on the transmitter.
2. The siren will chirp once and parking lights will flash once indicating that the system is now armed. The vehicle doors will lock upon arming when interfaced with the keyless entry system.

**SILENT ARMING / DISARMING:** Pressing the  +  buttons together on the transmitter will arm or disarm your system, No chirp sound will be heard, arm / disarm confirmation will be through the vehicles parking lights only.

**DEFECTIVE SENSOR REMINDER:** If the siren sounds 3 chirps, then you have left a door, trunk, or hood lid ajar.

### **SHOCK SENSOR / OPTIONAL SENSOR BY-PASS:**

Press the  button once: The siren chirps once, The system is armed.

Press the  button a second time within 5 seconds: The siren chirps twice, the Shock Sensor is now bypassed. The sensor bypass feature is programmed to activate for one arming cycle only. The security system will return to normal operation during the next arming cycle.

## **B. PASSIVE ARMING**


Active arming / disarming is controlling your security system via the remote transmitter. This security system is equipped with an optional Passive Arming feature, which allows the security system to arm 30 seconds after the last door is closed. Operation is as follows:

1. Turn the ignition to the "OFF" position and exit the vehicle.
2. After all entrances are closed, the security system LED will flash fast for 30 seconds. If you re-open any door / hood / trunk, the security system LED will stop flashing. It will begin flashing again once the vehicle all entrances are closed.

After 30-second timer has elapsed, the security system will automatically "ARM". The siren will chirp [1] time and the parking lights will flash [1] time.

### **PASSIVE ARMING WITH PASSIVE DOOR LOCKING**


The vehicle doors will automatically lock after passive arming cycle has been completed. Please refer to your installing dealer to activate this feature.

**PASSIVE ARMING BY-PASS:** While the LED is fast flashing for passive arming or Automatic re-arm, Press the  buttons twice, the security will respond with [1] chirp and LED will turn "ON". The security system will remain in this temporary state for as long as you wish.

To exit passive by-pass, press the  or  button and the system will

return to normal status.


### ACTIVE UNLOCK & DISARMING:

1. Press  button on the transmitter.
2. The siren will chirp twice and parking light will flash twice to indicating that the security system is now disarmed. The vehicle doors will unlock and dome lights will turn on for 30 seconds.

**TAMPER DISARMING:** If the alarm was triggered in your absence, upon disarming the system, the siren will chirp 4 times, the parking lights will flash 3 times.

### PATHWAY ILLUMINATION

This feature turns the parking light "ON" for 30 seconds upon a unlock signal and for 10 seconds upon the lock signal.

**TWO STEPS DOOR UNLOCK:** This feature will independently unlock the driver door only when deactivating the system. Pushing the  button a second time within 3 seconds will unlock the entire vehicle. Please refer to your installing dealer to install and activate this feature.

### LED DISPLAY:

| LED        | Function   |
|------------|------------|
| Off        | Disarmed   |
| Slow Flash | Armed      |
| On (Solid) | Valet Mode |

| LED                   | Function                         |
|-----------------------|----------------------------------|
|                       | Zone 1 / Warn-Away Trigger       |
| 2 flashes...<br>pause | Zone 2 / Trigger Trunk/Hood      |
| 3 flashes...<br>pause | Zone3/ Trigger on Door Switch    |
| 4 flashes...<br>pause | Zone4/Trigger on Impct Sensor    |
| 5 flashes...<br>pause | Zone 5 / Trigger Ignition Switch |

### CHIRP INDICATOR:

| Chirp    | Function           |
|----------|--------------------|
| 1 chirp  | Arm                |
| 2 chirps | Disarm             |
| 3 chirps | Defective Reminder |
| 4 chirps | Disarm / Triggered |
| 6 chirps | Car Locator        |

| Parking light | Function           |
|---------------|--------------------|
| 1 flash       | Arm                |
| 2 flashes     | Disarm             |
| 3 flashes     | Disarm / Triggered |
| 12 flashes    | Car Locator        |
| Constant On   | Under Remote Start |

## PARKING LIGHTS:

|                | Siren / Horn  | Parking Light  | LED        | Doors     | Starter | Dome Light              |
|----------------|---------------|----------------|------------|-----------|---------|-------------------------|
| 1. Arming      | 1 or 3 Chirps | 1 Flash        | Slow Flash | Locking   | Disable |                         |
| 2. Disarming   | 2 or 4 Chirps | 2 or 3 Flashes |            | Unlocking |         | Turns on for 30 -second |
| 3. Trigger     | Alarming      | Flashes        | Slow Flash |           | Disable | Flashes                 |
| 4. Panic       | Alarming      | Flashes        |            |           |         | Flashes                 |
| 5. Car Locator | 6 Chirps      | 12 Flashes     |            | Locking   |         |                         |

## AUTOMATIC RE-ARM

If this feature is selected, the security system will automatically re-arm itself 60 seconds after disarming with remote transmitter. Automatic rearm will cancel if any door is opened before the 60 seconds timer has elapsed. Please refer to your installing dealer to activate this feature.

## DEACTIVATING WITHOUT A TRANSMITTER

The Override function may be used if the remote transmitter is lost or inoperative.

1. Enter the vehicle and turn the ignition switch to 'ON' position.
2. Within 10 seconds push and release the valet switch

***If starter disable is installed. You can now start and operate the vehicle normally.***

## VALET MODE:

The valet switch allows you to temporarily bypass all system function, eliminating the need to hand your transmitter to parking attendants or garage mechanics. When the system is in valet mode, and remote start functions are bypassed, however the remote panic feature and remote door locks will remain operational. To use the valet mode, the system must first be deactivated either by using you remote transmitter, or by operating the Manual override sequence.

### Enter Valet Mode:

1. From the Unlock condition, turn the ignition to "ON" position.
2. Push and hold valet switch for 2 seconds until the LED turns on. The LED will remain on as long as the system is in 'valet mode'.







### Exit Valet Mode:

1. Return to normal operation, turn ignition 'on'.
2. Push and hold valet switch for 2 seconds, The LED will turn off

indicating the system has exited the valet mode.

### **PANIC FUNCTION:**

The transmitter can be used as a remote panic switch to manually trigger the vehicle's siren / horn in case of emergency.

1. Press and hold the  button for 3 second. The siren / horn will immediately sound.
2. During panic mode, the normal function of this transmitter button will be suspended. The  and  buttons can be used to lock and unlock the doors (if the option is installed), however once the button is pressed, the vehicle's starter disable device, (where installed) will be enabled allowing the vehicle to start.
3. To stop the panic, press and hold the  button on the transmitter. Also if any transmitter button other than the  or  button is pressed and released, the panic mode will be turned off immediately.
4. If no buttons are pressed, the panic function will stop automatically in 60 seconds.

### **TRIGGER THE SYSTEM**

When armed, your vehicle is protected as follows:

1. Light impacts will trigger the warn-away with 3 long chirps from siren/horn.
2. Heavy impacts / Doors open / Hood open / Trunk open / Turn on the ignition key will all trigger the programmed sequence.

The starter disable relay (if installed) prevents the vehicle's starter from cranking. The siren, horn, parking lights, and dome light will turn on alerting of an intrusion for 30 seconds. Then it will stop and automatic reset and re-arm. If one of the sensors or detectors is still active, the alarm system will sound a maximum of 6 times of 30 seconds cycles.

### **DOMELIGHT CONVENIENCE DELAY & SUPERVISION**

This system is a unique feature, which will turn on your vehicle dome light as following: (optional) *Additional installation required.*

1. Upon unlocking, the interior lights will remain on for 30 seconds.
2. If the vehicle is intruded, the interior light will flash for the same duration as the siren.


Note: Turning on the ignition switch or activating the system will turn off the dome light.

### **IGNITION CONTROL DOOR LOCKS.**


If the vehicle's door locks have been interfaced to the security system, the system will automatically lock the vehicle's doors when the ignition

is turned "ON" and /or unlock the vehicle's doors when the ignition is turned "OFF".

## **TRUNK RELEASE**

Press and hold the  button on transmitter for two seconds to remote control the trunk release or other electric devices.

## **CAR LOCATOR**

Press the  button once with armed mode to active car locator function. The horn will chirp 6 times. The parking light will flash 12 times, for you to easily locate your car.

## **REMOTE START OPERATION:**


### **WARNINGS:**

As with any product that performs automatic functions, there are certain safety precautions that you must practice and be aware of.

1. Keep the transmitter out of children's reach.
2. Do not leave anyone in the vehicle while running on remote control.
3. Alert servicing personnel that the vehicle can be started automatically.
4. Do not start the vehicle by remote while it's in an enclosed area or garage.
5. Always apply the parking brake and lock the vehicle as you exit the vehicle.
6. Should the unit malfunction, disconnect the fuse until the problem is corrected.
7. The use and operations of this system is the sole responsibility of the operator.
8. Some areas may have local ordinances that prohibit leaving a vehicle running on public streets.

### **A. TO REMOTE START THE VEHICLE:**

When you want to start your vehicle,

1. Press  button once on the transmitter.
2. The parking lights will flash to indicate the remote start received the signal.
3. The engine will start approximately 5 seconds.
4. Once the engine is running, after a couple of seconds the parking light will turn on again and climate controls will activate and adjust the vehicles interior temperature to your preset setting.
5. The vehicle will run for 5 to 30 minute cycle and automatically shut down.

### **(SAFETY START OPERATION:)**

The safety start feature allows you to press the \* button Twice before the vehicle will remote start or remote shut down.

**NOTE:** The Remote Start Unit will not start the vehicle if any one of the following conditions exists:

1. The hood is opened.
2. The brake pedal is pressed.
3. Move the optional remote start enable toggle switch to OFF position.  
(If installed)
4. The gear selector is in any gear other than "PARK" or "NEUTRAL"

### **TO TURN OFF THE REMOTE START:**

When the engine is running (by remote start), if you want to stop it,

1. Press \* button once on the transmitter.
3. Press the brake pedal

The vehicle will shut down and turn off the parking light to indicate engine stopped.

### **TO OVERRIDE VEHICLE FROM REMOTE START CONTROL:**

To operate the vehicle while running from the remote start.

1. Insert the ignition key and turn it to "ON" (not the start) position.
2. Press the brake pedal.

**Note: If the brake pedal is pressed before the key is in the ON position, the engine will shut down.**

### **TEMPORARY STOP FEATURE:**

This feature allows the vehicle to remain running after the key has been removed from the ignition. This feature is useful for occasions when you wish to exit and lock the vehicle for short periods of time, but would like to leave the engine running and the climate control on.

1. Before turning off the engine, press the \* button once on the transmitter. The parking lights will come on and the LED will flash 3 times to confirm Temporary Stop feature 'ON'
2. Turn the ignition key to OFF position. (The engine will stay running.)
3. The engine will run until the pre-programmed time elapsed or shutdown input is received.

### **TIMER START:**




This unit can be programmed to start and run the engine every 3 hours. The engine will run for the programmed run time and then shut down.

**IMPORTANT:** Timer Start should be used only in open areas, Never start and run the vehicle in an enclosed space as a garage or carport.

3 hours timer start: This feature is designed for an extreme cold climate usage. The system will auto start the vehicle every 3 hours, to prevent engine freezing and hard to start.

**A MAXIMUM OF SIX CYCLES CAN OCCUR.**

#### **ENTER:**

1. Press the  button once to remote start the vehicle. As soon as the vehicle is running and the parking lights have turned 'ON'.
2. Immediately press the  button then press  button once. The parking light will flash (3) times. The siren chirps (3) times. The vehicle is now programmed to start every (3) hours.
3. Press the brake pedal to stop the vehicle running.

#### **Exit the timer start:**

Timer start can be exited manually as follows:


1. Repeat the Enter Steps from above.

Or

1. Make sure the remote start system is not operating the engine.
2. Turn the ignition on. The LED and parking light will flash (4) times. The horn chirps (4) times.

#### **SHUT-DOWN INPUT FOR REMOTE STARTER:**

If any of the following conditions exist while the system is operating, the engine will not start or will shut down immediately:

1. The hood is opened.
2. The brake pedal is pressed.
3. Move the optional remote start enable toggle switch to OFF position. (If installed)
4. Engine is over-revved. {"Tachometer checking type" only}
5. The pre-programmed run time (5 / 10 / 20 / 30 minutes) has elapsed.
6. Transmitter  button is pressed.
7. The vehicle refused to start running after {3} unsuccessful attempts.

#### **DISABLING THE REMOTE START SYSTEM:** (If installed)

This feature allows your system's remote start unit to be temporarily disabled to prevent the vehicle from being remote started accidentally. This feature is useful if the vehicle is being serviced or stored in an enclosed area. To disable the remote start, move the optional remote start enable toggle switch to the OFF position.



## LIMITED LIFETIME WARRANTY PROVISIONS

( U.S. ,Continental U.S. and Canada Only)

1. Auto Page, Inc. WARRANTS that this new unit has been thoroughly inspected and tested at the factory prior to delivery. Your Auto Page equipment is guaranteed for “life” to the original purchaser/user of the equipment and the original vehicle in which it was installed by an authorized installer under the following conditions: If the product proves defective (according to Auto Page's testing) within the first year, the defective unit may be exchanged or repaired free of charge. “Proof of Purchase” (dated sales receipt) must accompany all warranty returns; **otherwise, your return will be rejected and sent back.** After one (1) year, the purchaser should ship the unit prepaid to Auto Page with a money order in the amount of \$30.00 to cover shipping and handling charges. **Note:** The product needs to be registered online at time of installation. [www.autopageusa.com](http://www.autopageusa.com)
2. Exclusion to the Limited Lifetime Warranty Provision: All two-way LCD and two-way OLED remote transceivers are excluded from the Limited Lifetime Warranty noted in paragraph no.1. All two-way LCD and two-way OLED remote transceivers are guaranteed to the original purchaser for a period of one year from date of purchase. If the product proves to be defective within the first year, the defective unit may be exchanged or repaired free of charge. All other provisions stated on this card apply.
3. This WARRANTY will be considered void if the equipment has been misused, neglected, improperly serviced or installed, altered, dropped or damaged by water, contrary to the Auto Page OPERATIONS MANUAL. Or, if used with accessories not approved by Auto Page, which may have contributed to the defect. **See note below regarding product installation\*\*.**
4. The purchaser's remedies under this WARRANTY shall be limited to the repair or replacement of electronic components only. **THE FOLLOWING IS NOT COVERED:** Damages or deterioration to cases, batteries, covers and cabinets; the cost of repairs, replacement and labor of which shall be borne by the purchaser even if occurring during the WARRANTY period.
5. Any equipment or parts which are claimed to be defective under this WARRANTY must be sent to the Auto Page Service center with “proof of purchase” at the purchaser's expense prior to such return, a Return Authorization Number should be obtained. Auto Page will return the equipment, charges prepaid. Warranty Service can be provided through the dealer where the equipment is originally purchased.
6. Any unexpired WARRANTY shall be applicable to equipment and parts in the possession of the original purchaser only.
7. THIS WARRANTY IS IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

8. Auto Page shall not be liable, under the foregoing WARRANTIES or otherwise, for: Any personal injury of any kind to the purchaser, its employees or agents or anyone else whomsoever resulting directly or indirectly from the use or presence of the equipment or parts; Consequential damages of any kind; any inability of the purchaser to use the equipment.

**\*\*IMPORTANT NOTE:** Any damages to the Auto Page system resulting from an installation performed by anyone other than a professional installation technician authorized by a dealer of Auto Page will void the product's Limited Lifetime Warranty.

**\*\*IMPORTANT NOTE:** Any damages to the alarm system resulting from an installation performed by anyone other than a professional installation technician authorized by a dealer of Auto Page will void the product's limited lifetime warranty.

### **Auto Page Warranty:**

You must register your product online at <http://www.autopageusa.com> to receive any warranty service.

Please go to the *customer service* tab and select *product registration*.

**It is the purchaser's responsibility to register this product for any future warranty service.**

### **Warning: Some batteries may contain Perchlorate**

**What is Perchlorate?** Perchlorate is both a naturally occurring and manmade contaminant increasingly found in groundwater, surface water and soil. Most perchlorate manufactured in the U.S. is used as an ingredient in solid fuel for rockets and missiles. In addition, perchlorate-based chemicals are also used in the construction of highway safety flares, fireworks, pyrotechnics, explosives, **common batteries**, and automobile restraint systems. Perchlorate contamination has been reported in at least 20 states. Perchlorate greatly impacts human health by interfering with iodide uptake into the thyroid gland. In adults, the thyroid gland helps regulate the metabolism by releasing hormones, while in children; the thyroid helps in proper development. Perchlorate is becoming a

serious threat to human health and water resources. **“Perchlorate Material – Special handling may apply.” For more information, go to <http://www.dtsc.ca.gov/hazardouswaste/perchlorate/>**



960 Knox Street Unit B, Torrance, CA 90502

Tel: (310) 323-1800 or (800) 262-2527

[www.autopageusa.com](http://www.autopageusa.com)